

Wainscoting



Authentic Swanstone Wainscoting, the perfect way to protect walls.

Panels SS4896 SS3696 SS30145

Swanstone is a compression-molded solid surface that is resistant to cracks, gouges and dings. It is easy to clean and care for, so it looks great for a very long time.

We offer three sizes of genuine solid surface Swanstone panels to give you a variety of heights to choose from. The sizes are 48" x 96", 36" x 96" and 30" x 145".

Our wall panels are perfect for high-traffic, high-pressure areas like food service, shipping, hospital hallways and even elevator interiors.

You'll save time, money and hassle by anticipating and eliminating the inevitable scratches and wall damage caused by gurneys, mail bins and handtrucks in a hurry to their destinations.

Complete your wainscoting project with a full array of protective finishing products:

(1) Swanstone Batten Strip TK0372

Matching batten strips cover caulked seams so they look good and hold up for years. Available in 72" x 4" size.

(2) Swanstone Chair Rail Moldings TK6072 TK105

These optional trim pieces are a bold way to top off your new Swanstone wainscoting. Two lengths are available, 3.875" x 74" (TK6072) and 3.875" x 105" (TK105).


Swanstone Inside Corner Moldings CM2072 CM2096

Covers inside corner seams with a matching Swanstone color. Available in 72" and 96" lengths. Sold in sets of two.



(3) J-Channel

By screwing directly into the studs, the J-channel ensures that your Swanstone panels stay firmly attached to the wall. J-channels can be purchased from your local glass company.

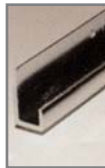

(4a, 4b, 4c) Plastic Finish Moldings


- ECPM96** End Cap Molding
- ICPM96** Inside Corner Molding
- OCPM96** Outside Corner Molding

Available in 96" lengths in white, bone and black. Finish the edges and corners with this inconspicuous and affordable option. NOTE: Plastic Finish Moldings must be applied as panels are being applied to walls.


(5) Vinyl Cove Base

Vinyl cove base is available wherever building and finishing materials are sold.


Notes: Solid colors are not recommended due to the increased maintenance. Panels are easily cleaned and maintained with a Scotch-Brite pad and liquid abrasive cleaner. Any surface scratches can be removed with #400 grit sandpaper.

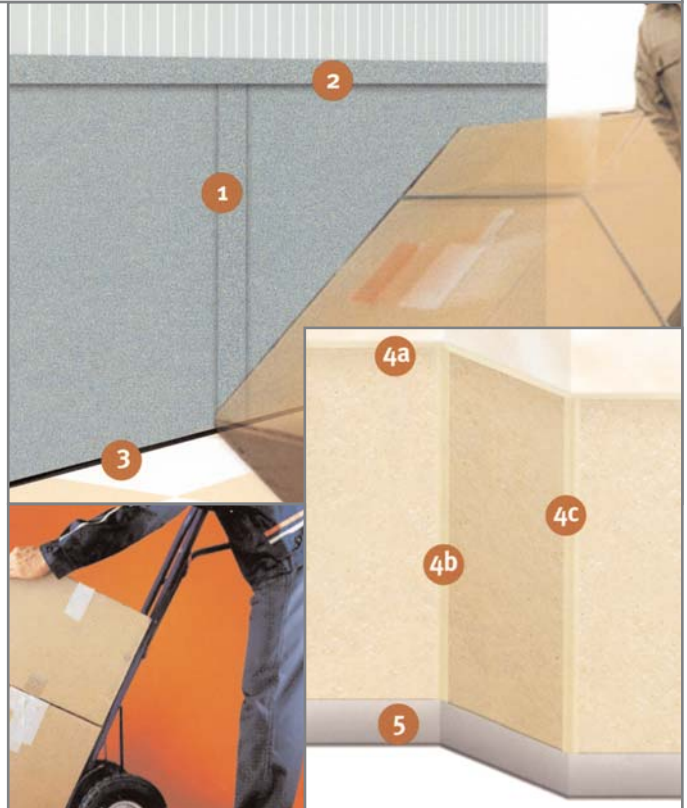


Install with J-Channel

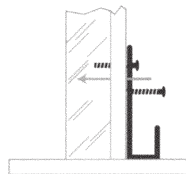

Use screws to attach the J-Channel to wall studs at the floor.

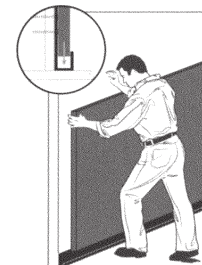


Apply wall paneling adhesive to the back of the panel, set in the J-Channel and press it firmly to the wall. You may use double-faced tape to hold the panel in place as the adhesive cures.

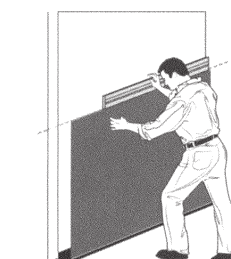


Draw a level line the length of the wall and attach the trim molding to the top of the panel, making sure that it stays parallel to the level line.


Install with Cove Base

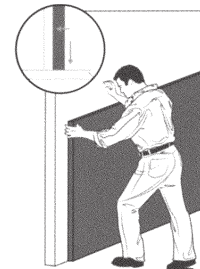

Apply wall paneling adhesive to back of panel. Set it on the floor, and press it firmly against the wall.

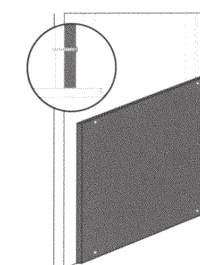

Drill pilot holes into the panel at top and bottom at the studs. Use screws to reinforce the panel to walls.

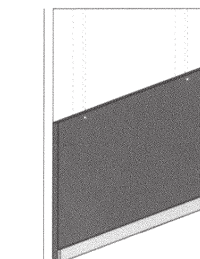

Apply cove base along the bottom of the panel.

